



TECWARE

arc  
S P E C T R U M

Quick Start Guide

## Remote Control Instructions

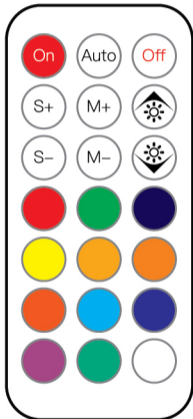

 On / Pause

 Automatic Play 366 modes

 Off / Autosave

---

### 10 Speed Levels

 Lighting Speed Increase

 Lighting Speed Decrease

---


### 366 Lighting Modes


 Next Mode

 Previous Mode




---

### 10 Brightness Levels



 Brightness Increase

 Brightness Decrease

## RGB Sequence Adjustment

- Press  button, and then press  button to enter the setup menu.
- 3 LED Lights ( Red, Green and Blue ) will appear on the fan plugged in to FAN1 Hub, indicating the current RGB sequence.
- Press the  to adjust the RGB sequence to your selection, and then press OFF button to save your changes.

## Matching Remote Control to Hub (One-to-one):

- Long press  for 5 seconds. When the LED light blinks, this remote control is matched to the hub (Only this remote control can control it).
- Long press  for 5 seconds. When the LED light blinks, one-to-one matching is cancelled (Any ARC remote control can control it).


---

## Warranty

- 1 Year. Please contact your local distributor for support.

## Fan Hub

- Switch to **ON** ← to enable Addressable RGB Sync to Motherboard (Ensure ARGB Header is plugged in to motherboard)
- Switch to **OFF** → to enable controls using the Remote Control.

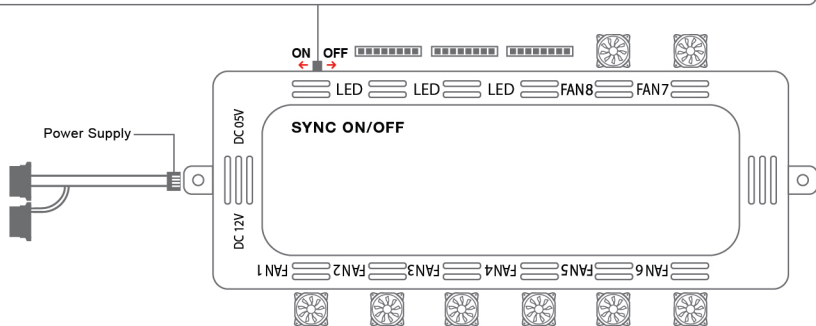

\*Please connect Fans in sequence, otherwise they will not light up. For example, if installing 4 fans, fill up FAN1, FAN2, FAN3, and FAN4 ports first.



TECWARE

[www.tecware.co](http://www.tecware.co)