

TECWARE

 
EXO

Quick Start Guide


Buttons & Functions

- ① Button (Left Click)
- ② Button (Right Click)
- ③ Button (Scroll Wheel)
- ④ Button (Forward)
- ⑤ Button (Backward)
- ⑥ Button (DPI Loop)
- ⑦ Toggle Light Modes (Exo Lite)
Toggle Polling Rate (Exo +)
Toggle Lift-off Distance (Exo Elite)
- ⑧ AERO Cord
- ⑨ PTFE Mice Feet
- ⑩ Optical Sensor


*Functions for Buttons 1 - 6 can be changed in the software.

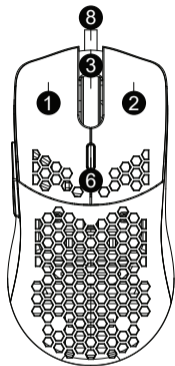



Exo Lite:

 

Exo Plus:

 


Exo Elite:

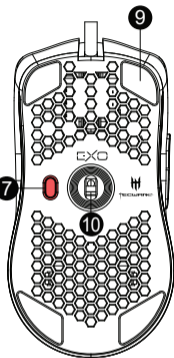  

DPI Settings

 1. Enable/Disable the DPI Level.
2. Enable to set individual Horizontal and Vertical DPI.
3. DPI Level Color (Scroll Wheel LED)
4. Increase/Decrease DPI

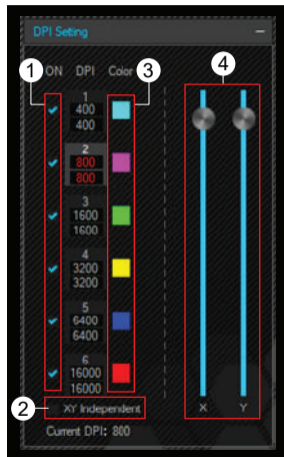

Recording & Assigning Macros

1. Click "Macro Editor".
2. Click "New macro" and input a name for your macro.
3. Adjust the settings for your macro (Automatic insert delay, Cycle until key released etc.).
4. Once ready to record, press "Start record" and carry out the actions for your macro. Once done, press "Stop record". You may insert unrecordable actions such as Mouse clicks by pressing "Insert event".
5. Macros save automatically. You may close the window once done.
6. To assign a macro to a button, click on the button function, click "Macro", and select the macro you want to assign. Click "Apply" to save settings.

System Requirements

- PC system with USB port
- Windows XP / VISTA / 7 / 8 / 10

Installation

- Plug your TECWARE EXO into the USB port of your PC.

No driver installation is required for this product, the operating system should auto detect the mouse when you plug it into your computer.

Software

- To access additional features, please download the EXO Software from **www.tecware.co**

Warranty

- 1 Year. Please contact your local distributor for support.

TECWARE

www.tecware.co