

TECWARE

EXO


WIRELESS

Quick Start Guide

## Buttons & Functions





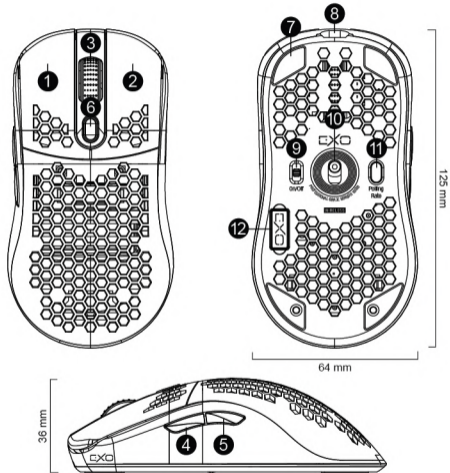

- ① Button (Left Click)
- ② Button (Right Click)
- ③ Button (Scroll Wheel)  
*\*Scrollwheel LED only lights up when charging*
- ④ Button (Forward)
- ⑤ Button (Backward)
- ⑥ Button (DPI Loop)
- ⑦ PTFE Mice Feet
- ⑧ USB Type C Connector
- ⑨ On/Off Switch
- ⑩ PixArt 3335 Optical Sensor
- ⑪ Polling Rate Loop
- ⑫ USB Dongle





**\*Functions for Buttons 1 - 6 can be changed in the software.**



## DPI and Polling Rate Indicators

When switching DPI / Polling rate, the LED on the tecware logo will flash twice according to the corresponding colors.

DPI SETTING	DPI	LED COLOR
DPI Setting 1	400	RED 
DPI Setting 2	800	WHITE 
DPI Setting 3	1600	BLUE 
DPI Setting 4	3200	GREEN 
DPI Setting 5	6400	YELLOW 
DPI Setting 6	16000	PURPLE 

POLLING RATE	LED COLOR
125hz	GREEN 
250hz	BLUE 
500hz	ORANGE 
1000hz	RED 

## Pairing the mouse (Wireless)

1. Remove the USB dongle. (Stored in the underside of the mouse)
2. Plug the dongle into your PC/Laptop.
3. Turn on the mouse. (Located at underside of the mouse)
4. The mouse should automatically pair with your PC/Laptop.

*\*Note: If your mouse does not pair automatically, hold buttons 1,2 and 3 together for 3 seconds, then re-plug the dongle.*

## Charging the mouse

1. When battery is low (10%), the scroll wheel green LED light will start blinking.
2. Connect the mouse to your PC/Laptop using the cable provided. The mouse will charge automatically.
3. When the scroll wheel LED light disappears (while plugged in), your mouse is fully charged.

*\*Note: Scroll wheel LED light color and function is fixed and cannot be changed.*

## **Recording & Assigning Macros**

1. Click on "Macro Manager".
2. Click on the "+" to create New Macro and edit the Macro name.
3. Select the created macro from the list on the left and press "Recording" to start the macro recording.
4. When done, press the "Stop " button and press "Save" to create the macro.
5. To assign a macro to a button, click on the button Settings, select "Macro" From the drop down list and select the macro you want to assign.Click " Apply" to save settings.

## **Resetting to factory settings**

- If you have installed the software, simply click on the reset button.
- If not, hold buttons 1, 2, 4 and 5 together for 3 seconds. The tecware logo LED light will blink once, signifying that it has been reset.

## **System Requirements**

- PC system with USB port
- Windows XP / VISTA / 7 / 8 / 10

## **Software**

- To access additional features, please download the EXO WIRELESS Software from [www.tecware.co](http://www.tecware.co)

## **Warranty**

- 1 Year. Please contact your local distributor for support.

The logo for TECWARE features the word "TECWARE" in a bold, white, sans-serif font. The letter "T" is stylized with a vertical line extending downwards from its base. The letter "E" has a horizontal line extending to the right from its top bar. The background is a dark, abstract geometric pattern of overlapping planes and lines in shades of gray and black.

TECWARE

[www.tecware.co](http://www.tecware.co)