

INFINITY M2

DUAL TEMPERED GLASS MATX CASE

Quick Start Guide

Contents

	Specification	p.01
	Panel Removal	p.02
	Front Panel I/O Connections	p.03
	Component List	p.04
	Motherboard Installations	p.05
	SSD / HDD Installation	p.06
\$	GPU & PSU Installation	p.07
	CPU Cooler / Fan Installation	p.08
	Package Contents & Warranty	p.09




Specifications

Туре	Specification
Motherboard Support	mATX, ITX
Dimensions	318(L) x 210(W) x 398(H) mm
3.5" HDD Drive Bay	1
2.5" SSD Drive Bay	1
Expansion Slots	4
Maximum GPU Length	310mm
Maximum CPU Cooler Height	165mm
Maximum PSU Length	160mm

Panel Removal



 Remove the 2 screws at the back and then slide the TG out as shown.

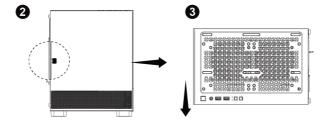

2) Remove the side panel and remove the screw as shown.

3) Slide the front TG Panel following this direction.

Front Panel I/O Connections





These cables are connected to the motherboard for the power button (power sw), reset button, HDD LED, and power LED (P+ / P-).



HD AUDIO

This connector attaches to your sound card or motherboard and is used to provide the front panel mic input and headphone output.




USB 3.0 CONNECTOR

This cable connects to the USB 3.0 header on the motherboard to enable the front USB 3.0 ports.

Component List

VISUAL	ITEM	QTY	APPLICATION
A	Motherboard & SSD screw	10	Motherboard and 2.5 hard drive installation
В	Motherboard standoff	7	Motherboard installation
c	HDD mount screw	4	3.5 hard drive installation
D	PSU & Rear expansion slot screw	5	Power supply installation Mounting of GPU and other expansion cards
E	Cable tie	10	Cable management


Motherboard Installation

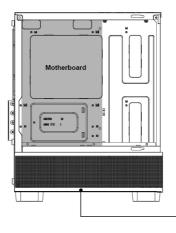




Screw Type A & B

SSD / HDD Installation

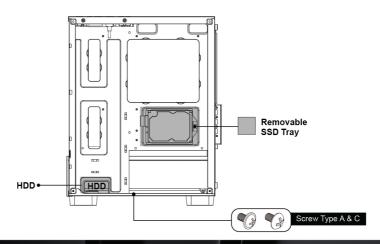


GPU & PSU Installation


Graphics Processing Unit and other expansion cards

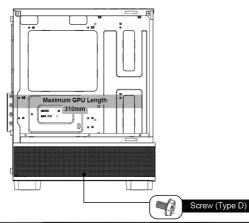

Power Supply Unit Installation

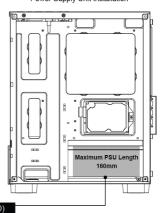

CPU Cooler / Fan Installation

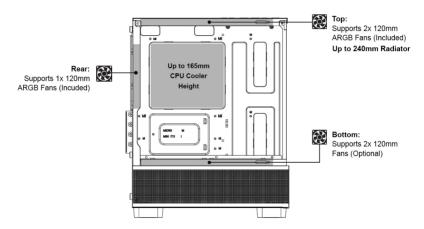

Package Contents

- 1 x TECWARE INFINITY M2 Case
- 1 x Bag of Accessories

Warranty

• 1 Year. Please contact your local distributor for support.

TECWARE